
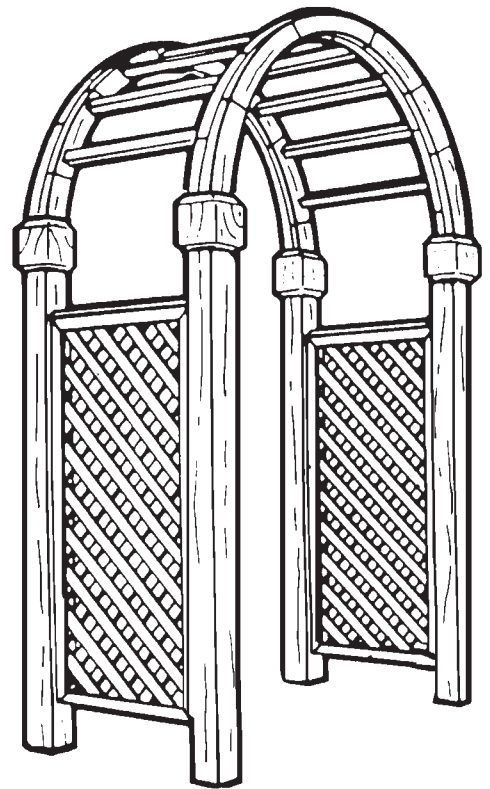
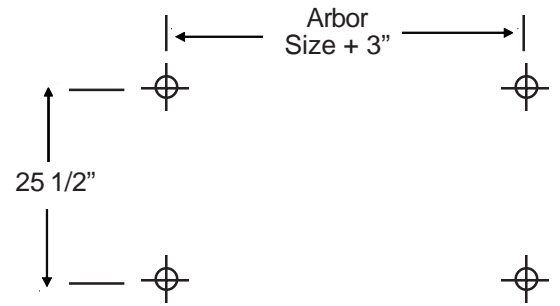


# HEAVY CEDAR ARBOR ASSEMBLY

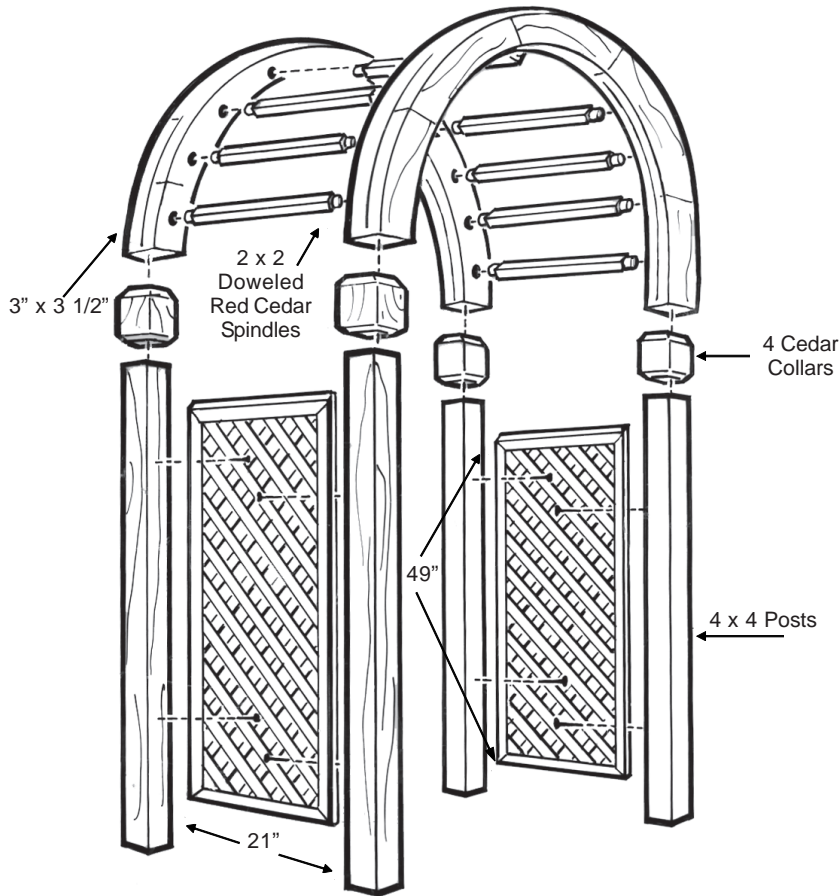

- 1 Dig (4) 6" to 8" diameter holes 2 1/2 ' to 3' deep.
- 2 Assemble arbor sides to posts as shown in diagram. Distance of panels to top of post is left to the discretion of the installer and/or customer.
- 3 Install both side panels in holes and plum up level. Set spacing in between assembled panels the same as arbor size. (ie. 3' arbor = 3' space).

Top of all posts are to be leveled and heights should be set at installer and/or customer discretion.

- 4 Slide collars onto posts. Assemble arbor top and spindles as shown. Position assembled arbor onto posts and slide up collars to cover seam. Nail both sides to secure.